

FASOUL

FASOUL C1

Product Instruction Manual

Safety Warnings and Instructions

Please read all instructions carefully before using this product and follow the instructions for use.

Dear users, thank you for purchasing our products. For your better experience and use of our products, please read this manual carefully before use.

C1 Product Instructions


Cautions

- The safety warnings and instructions herein do not cover all possible situations and care should be taken when using or maintaining this product.
- Do not attempt to open, repair, or replace any component of this product other than in accordance with the instructions. Otherwise, it may result in personal injury, and will not be covered by the warranty.
- Please ensure that no dust, lint, or debris enters the interior of the product; otherwise, it may result in personal injury.
- Do not throw or smash the product and avoid damage of a strong impact.
- Do not touch the heater under any conditions, as this may result in personal injury or damage to the product.
- Do not remove the cigarette while using this product; if you need to remove it, turn off the device first.
- Do not insert any object into the heating compartment except for heating the non-combustible cigarette.
- Do not store or use this product with flammable and explosive objects, liquids, and gases.
- Do not store or use this product in an excessively hot or humid environment.
- Do not put this product in water or get it wet; if this happens accidentally during charging, stop charging (using) immediately while ensuring safety.
- You can charge this product with an adapter that meets safety standards and has an output of 5V=2A.
- This product can only be charged indoors.
- This product can only be used with special cigarettes for induction heated smoking devices; do not use this product with conventional cigarettes and similar products or other tobacco products without being approved and licensed by the manufacturer.
- The special cigarette that comes with this product is for one-time use only. It cannot be used repeatedly and cannot be lit with an open flame.
- This product contains non-replaceable batteries.
- Keep this product and its components out of the reach of children.

Battery Use

- If the product is not used for a long time, the battery voltage will naturally drop, so make sure to charge the battery before use.
- If the hours of use becomes very short, even after a full charge, it means that the battery reaches its end of life.
- If this product will not be used for a long time, avoid leaving it in a fully charged state or in a high-temperature/humid environment to avoid accelerating the aging of the battery.
- If the battery is leaking, please avoid contact; if accidental contact or inhalation happens, please seek medical attention immediately.
- This product uses lithium-ion batteries, and, when necessary, dispose of them in accordance with the regulations of the local government on the classification and management of electrical and electronic equipment and lithium-ion batteries.

Product Parts

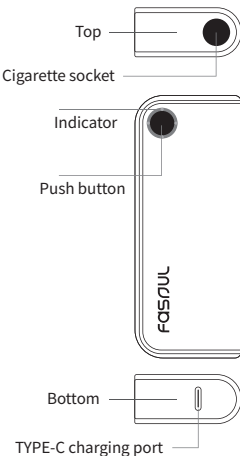


Battery Condition

Short press the button and the indicator will light up to indicate the current battery level.

Indicator	Battery Level
The first indicator light flashes three times	Low battery, needs charging
The first light is on	≥1pc
The 1st and 2nd lights on	≥4pcs
The 1st, 2nd and 3rd lights on	≥9pcs
The 1st, 2nd, 3rd and 4th lights on	≥12pcs

Charging

Plug in the TYPE C USB charging cable as shown in the picture below.

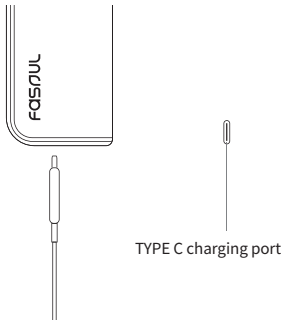


The indicator light flashes during charging and goes off when charge is complete

Power	Indication
0~25%	The 1st white light is flashing, the 2nd, 3rd, and 4th lights are not on.
25%~50%	The 1st white light is always on, the 2nd white light is flashing, and the 3rd and 4th white lights are not on.
50%~75%	The 1st and 2nd white lights are always on, the 3rd white light is flashing, and the 4th white light is not on.
75%~100%	The 1st, 2nd, and 3rd white lights are always on, and the 4th white light is flashing. When fully charged, the white lights will all light up, and go off in 2 seconds.

Insert a cigarette

Insert a cigarette for this product in the socket as shown in the picture.

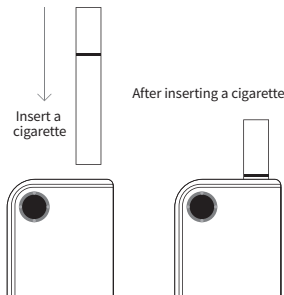

Preheating and Smoking

Long press the button for 2 seconds, and the device will vibrate once to indicate that it has started preheating, while the white lights are breathing in sequence. After the preheating is complete, the indicator light is always on, accompanied by vibration. You can start smoking at this time. After 215 seconds or 14 puffs, the light will go out.



"Remove the cigarette when you finish smoking. During smoking, long press the button for 2 seconds to turn off the heating."

Product Information

Product Size	87×36×19mm
Battery Capacity	1600mAh
Rated Input	5V=2A
Operating Time	240 seconds
Number of Puffs	14±1 puffs
Number of Consecutive	15 cigarettes
Charging Time	45-60 minutes

Note: This product shall not be sold to minors.

Troubleshooting

Item	Indication	Remarks
Cannot insert the cigarette	Cannot insert the cigarette	Check whether the cigarette can be used for this product
Low battery warning	The first white light flashes three times	Warning stops after charging
Short circuit/broken circuit warning	The 1st and 2nd white lights flash three times in turn with the 3rd and 4th lights	It is not recommended to use the device anymore and please consult the manufacturer
High-temperature warning	The 1st and 4th white lights flash three times in turn with the 2nd and 3rd lights	Stop using the product immediately and wait till it cools down
Unable to charge	The charging indicator does not light up	Replace the charger or charging cable

Safety Precautions

To prevent injury, please read all safety precautions before use.

Safety precautions do not cover all possible situations and special care should be taken when using this product.

The Safety Precautions section contains important safety information. Please keep this manual for reference.